



CONTROLS



COM1 and COM2 are the same type of port.
Control and air curtain cables can be
connected to either COM1 or COM2.

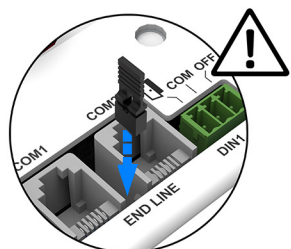


When multiple air curtains are
connected to an only control,
the last one must incorporate a
Jumper in "END LINE" pins.

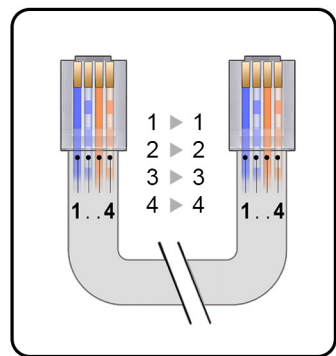

4 PINS CONNECTOR RJ11
Are used for the connection to the
control and also to the slaves air
curtains connected

- 1 Control Entrance (*)
The installer has not to
make anything, the cable
is already passed and
connected to the PCB
- 2 Power Supply Entrance
Flange included
inside bag

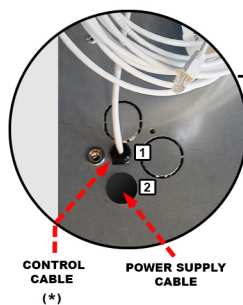

AIR CURTAIN 2 (SLAVE)

TO UNITS 3, 4... UP TO 12

(DIN1) DOOR CONTACT
(DIN2) OFF
(AIN) TEMPERATURE SENSOR
(DOUT) RUN OUT
(Free Voltage Output)


Removable
connectors

AIR CURTAIN 1 (MASTER)

POWER SUPPLY CONNECTION BOX



400V~ 3 50/60Hz

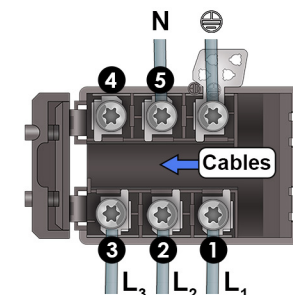

3-PHASE
400V~ 3 50/60Hz

RECESSED ARIS is only available
for a 400Vx3 power supply.

INTERNAL CONNECTIONS (open grille)

